


## DEXP 42A9000


**Шар №1** Фото пульта от телевизора, на котором будет производиться настройка.



**Шаг №2** Для входа в меню телевизора, необходимо нажать клавишу **MENU** на пульте.  
 В зависимости от модели, интерфейс меню может отличаться, но общий смысл и порядок действий остается актуален.  
 Для этого необходимо, перейти в пункт **НАСТРОЙКА** (подтвердить выбор клавишей «OK» на пульте)


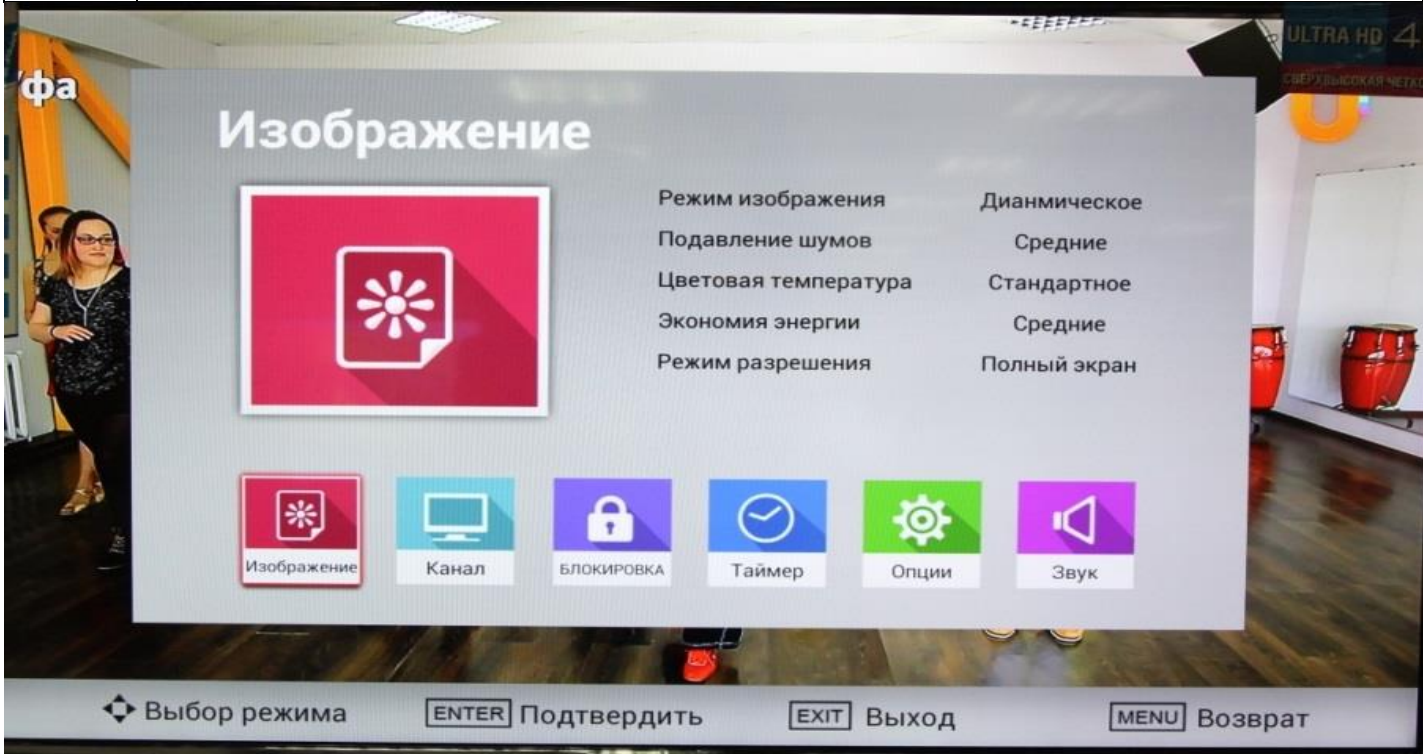


**Шаг №3** Заходим в раздел **КАНАЛ**.  
 Тип антенны указываем **DVB-C**  
 Переходим в раздел **Автоматическая настройка**

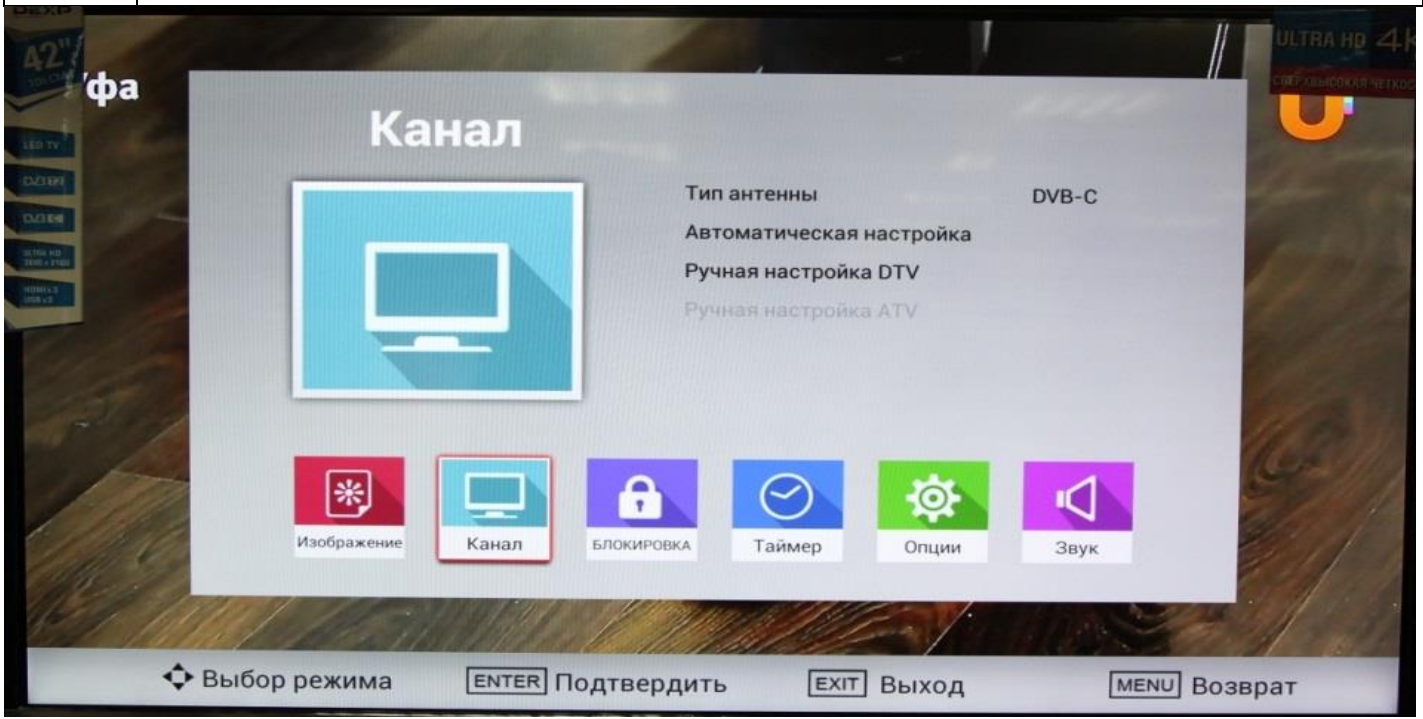

Шаг №4

Тип сканирования ПОЛНОЕ СКАНИРОВАНИЕ.  
Идентификатор сети АВТО  
Нажимаем ПОИСК

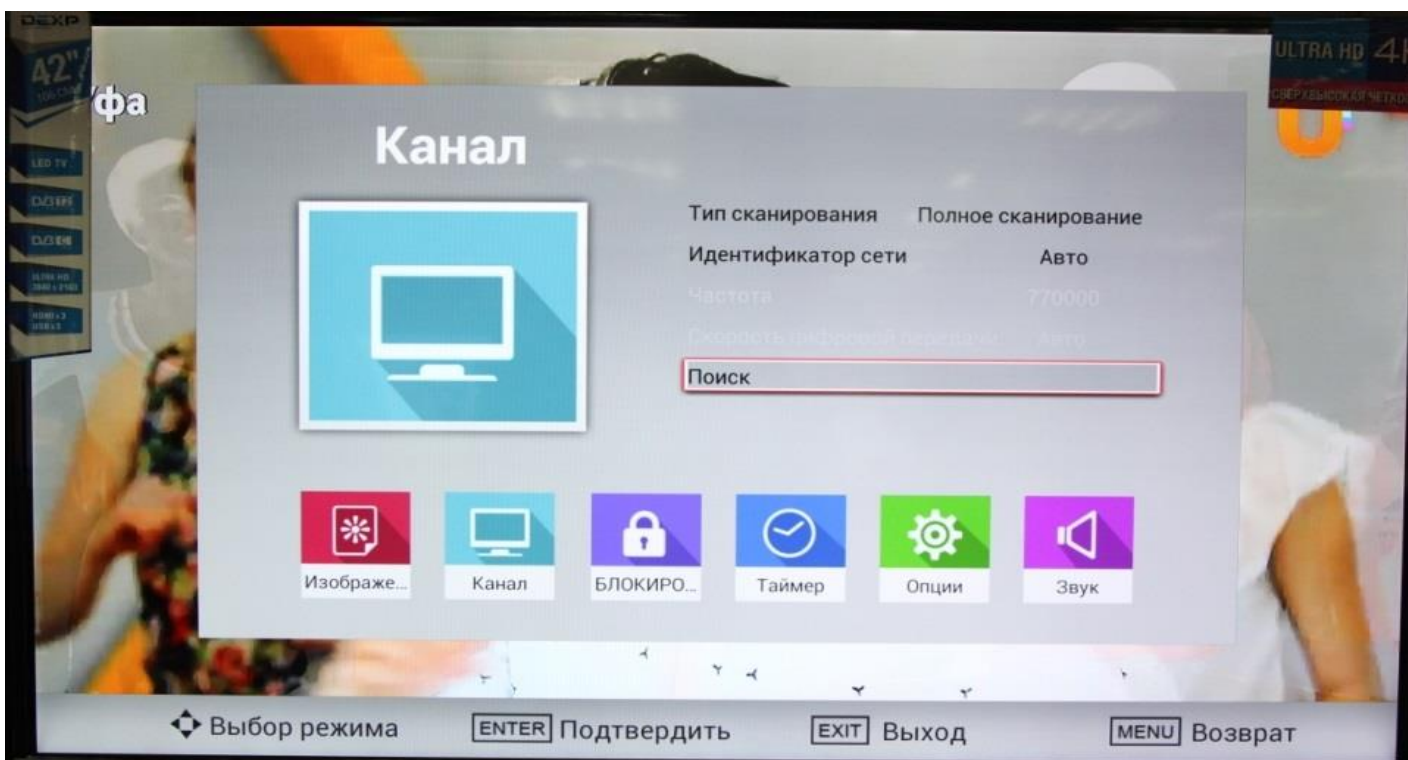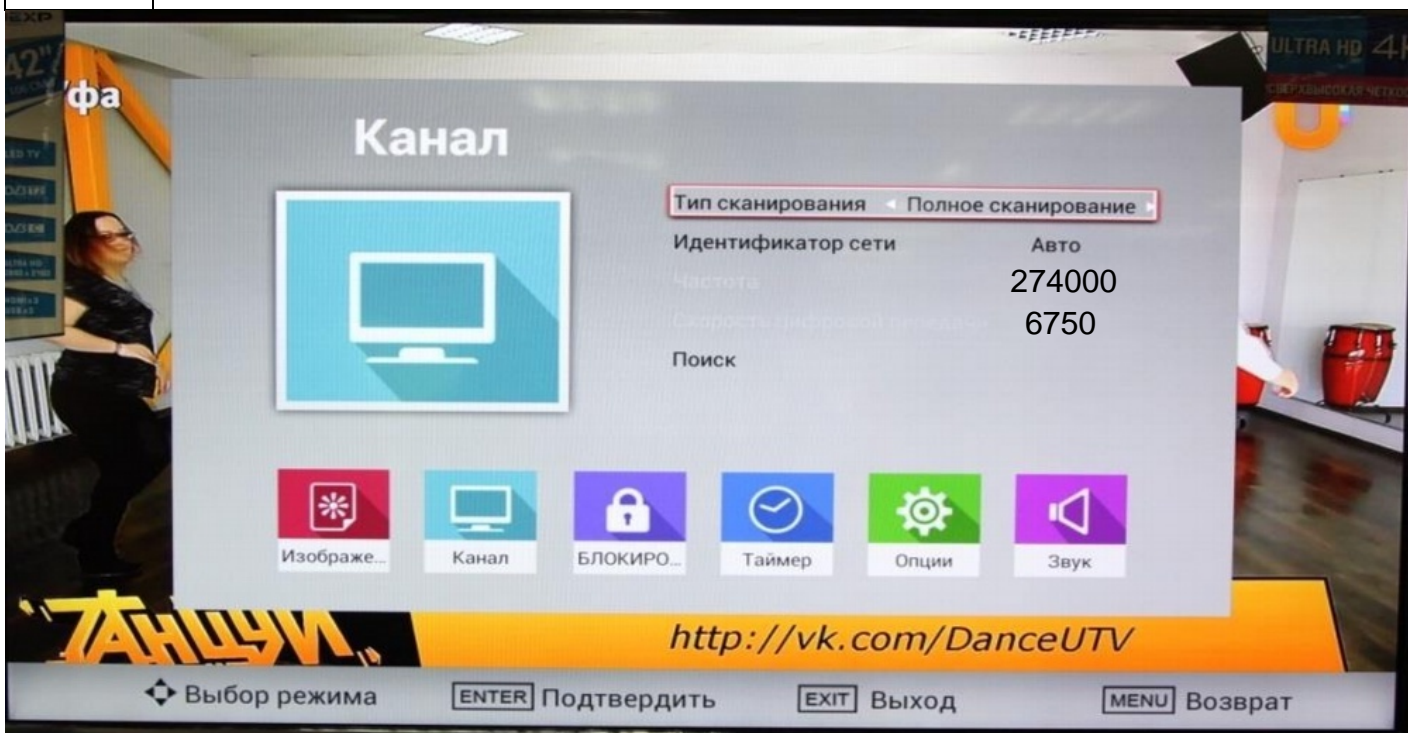

Шаг №6

Ваш телевизор настроен.

Нажав клавишу «EPG» откроется меню, электронной программы передач.

The screenshot displays the Electronic Program Guide (EPG) interface on a television. At the top left, there is a preview window showing a man in a red shirt and a woman in a blue shirt dancing. Below the preview, a yellow banner reads "Вы смотрите урок по Сальсе" (You are watching a salsa lesson). To the right of the preview, the title "Электронный справочник по прог" (Electronic program guide) is visible. Below the title, there is a section for "Информ." (Information) with a description of a dance project. On the right side, there are two columns: "DTV" and "Радио" (Radio). The "DTV" column lists channels 24 through 36 with their respective HD content. The "Радио" column is currently empty. Below the preview and information, a horizontal bar shows the days of the week: "ВС 29", "ПН 30", "ВТ 31", "СР 1", "ЧТ 2", "ПТ 27", "СБ 28". The "ПТ 27" (Friday) is highlighted in blue. Below this bar, a list of programs is shown for the selected day, including "Танцуй! [6+]", "Просторная студия. [16+]", "Вијести с Мирко Здравичем. [12+]", "Мой город. [12+]", "Гаджет. [12+]", "Будни и балы Мариинской гимназии 2015. [6+]", and "Фотопроект. [12+]". At the bottom of the screen, there are several control elements: a red dot icon for "Предварительная запись" (Pre-recorded), the "EPG" button, a directional pad for "Выбор режима" (Mode selection), the "ENTER" button for "Подтвердить" (Confirm), and the "EXIT" button for "Выход" (Exit). The top right corner of the screen shows "ULTRA HD 4k" and "СИР ВЫСОКАЯ ЧЕТОТ" (High Definition).